




**INDUCTION
SOLUTIONS**

16121 Flight Path Dr.
Brooksville, FL 34604
(352)593-5900

Tyco 75A Relay

**87: 12V Power output
when trigger is activated**

**85: Power for
the trigger**

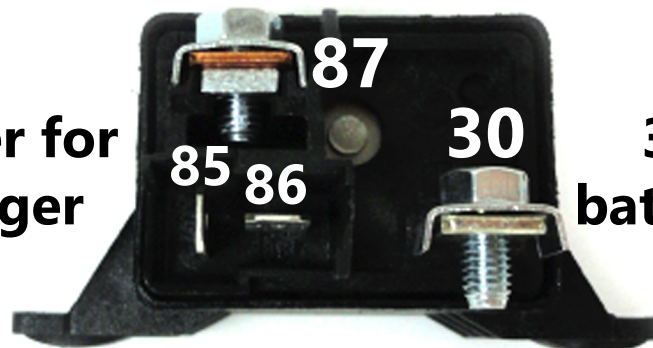

**30: Fused
battery supply**

**86: Ground for
the trigger**

**Note: 85 OR 86 must be switched!
Otherwise the relay will always be activated.**

